


# Installation Instructions for the Covermate II

Figure 1 - Installation of Mounting Brackets

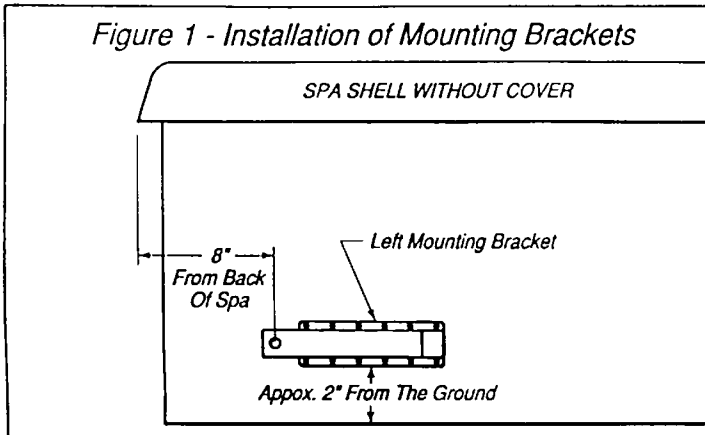

## Step #1


Position the spa cover (in closed position) on the spa, making sure that all four corners are properly positioned and square on the spa.

## Step #2

Using the #10x1" screws, attach the left and right Mounting Brackets to the appropriate sides of the spa. (See Fig. 1)

**Caution:** To prevent splitting of wood cabinet, pre-drill holes with a 1/16" drill bit.

Figure 2 - Attaching Pivot Arms

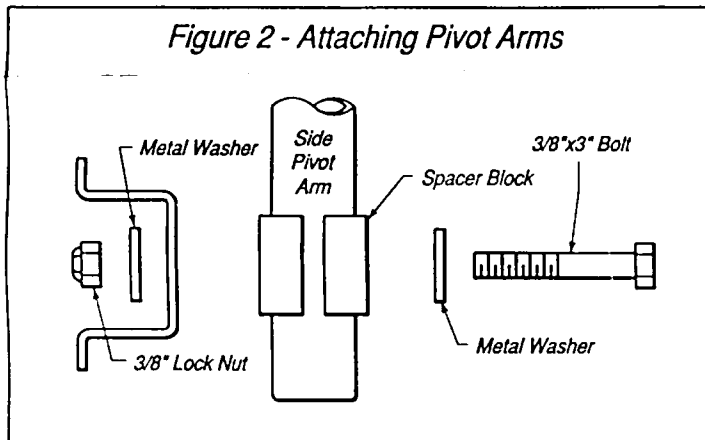

## Step #3


Using the 3/8"x3" bolts, metal washers, and lock nuts, connect the Pivot Arms to the Mounting Brackets. (See Fig. 2)

## Step #4

Insert the long end of the Support Arms into the Coupler Piece. Then slide Support Arms into the top of the Pivot Arms.

**Note:** The Upper Support Arm is the longer of the two Support Arms.

Figure 3 - Assembly of Support Arms to Pivot Arms

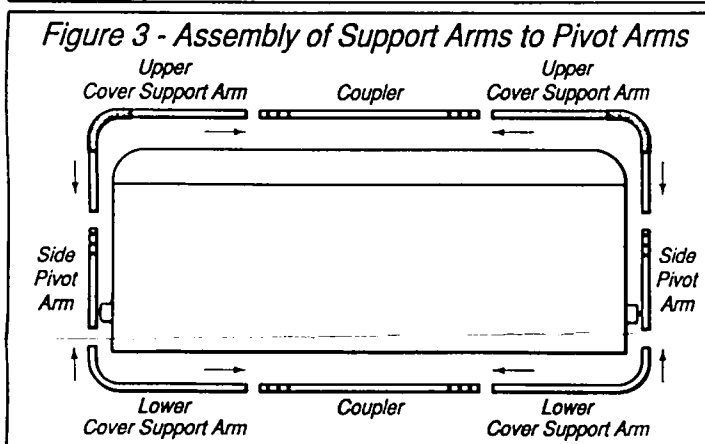

Next, insert the Lower Support Arms into the other Coupler Piece, then slide the Lower Support Arms into the remaining end of the Pivot Arms. (See Fig. 3)

## Step #5

Lay the assembled Covermate on the spa cover. Adjust and center the upper Coupler Piece and Support Arms so that the Coupler Piece is lying parallel to the spa cover's hinge about 1/2" away. (See Fig. 4)

Using the #10 self tapping screws, fasten Support Arms to the Coupler Piece.

**Note:** Be sure to rotate the Coupler Piece so that the inserted screws are at a horizontal angle with heads facing the back of the spa.

Repeat this procedure for the Lower Support Arms.

## Step #6

Slip the black hand grips to the edge of the spa cover and snap black plastic screw head covers on. You are done!

Figure 4 - Assembled Covermate II

