



Safe-T-Rail

Installation Instructions

- 1) Slip black mounting brackets on rail and determine desired rail location on spa cabinet.
- 2) With rail location determined, mount top black bracket at the highest point on the cabinet using the 8 - #12 screws provided.
NOTE: To prevent splitting of the cabinet, pre-drill screw holes with 1/8" drill bit.
- 3) With top bracket mounted adjust rail height to clear the top of the spa by a minimum of 1" and mount bottom bracket.
- 4) The Safe-T-Rail can be rotated either in or out of the spa by depressing button lock in bottom black bracket and locked into the desired position.

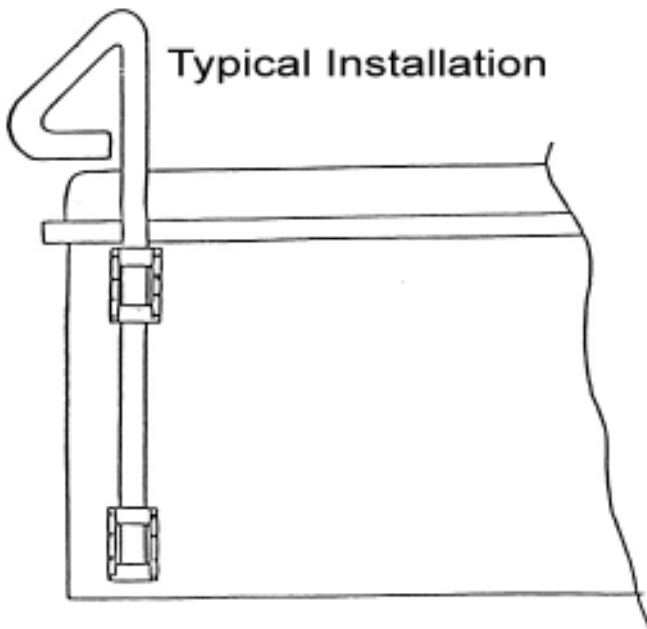

Optional - Rail/Stand

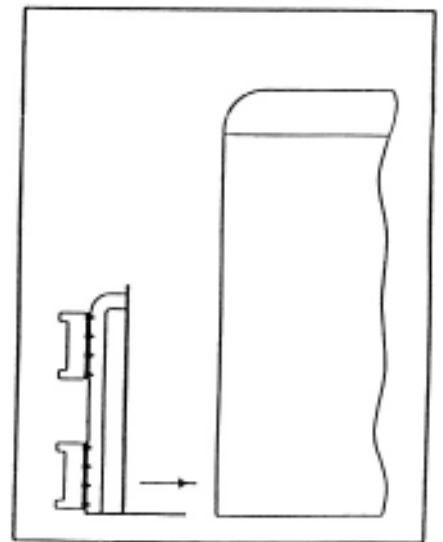

NOTE: Rail/Stand is an ideal option, when the wood cabinet may not be strong enough to support the Safe-T-Rail.